

SUPERBIRD DECAL PLACEMENT

Plymouth

L.H. DRIVERS SIDE

Plymouth

R.H. PASSENGER SIDE

A--SIDE MARKER LITE
 B--3/4 INCH
 C--3/8 INCH
 D--EVEN

AFTER YOU GET THE APPROX. LOCATION, I WOULD PUT A LEVEL ACROSS THE QUARTER PANEL AND PLACE A WAX PENCIL MARK, SO THE PLYMOUTH LETTERS WILL BE LEVEL AND DON'T RUN UP OR DOWN HILL.

I'VE BEEN TOLD THAT WHEN PLACING THE DECALS ON YOUR CAR, USE TWO OR THREE DROPS OF DISH WASHING DETERGENT IN THE CAN OF WATER & APPLY TO THE QUARTER PANEL. YOU THEN CAN SLIDE THE DECAL AROUND UNTIL IT'S WHERE YOU WANT IT. THEN SQUEEGEE THE WATER OUT.


WING DECAL PLACEMENT!

TOP OF WING DECAL APPROX. 12 1/2" OFF THE TOP OF THE QUARTER PANEL.

THEN 2" IN ON THE VERTICAL WING UPRIGHTS AT THE NARROWEST POINT.


BLACK DECALS ON
 WHITE, ORANGE
 YELLOW, L/LITE CARS

WHITE DECALS ON
 BLUE, TOR-RED
 PETTY BLUE CARS

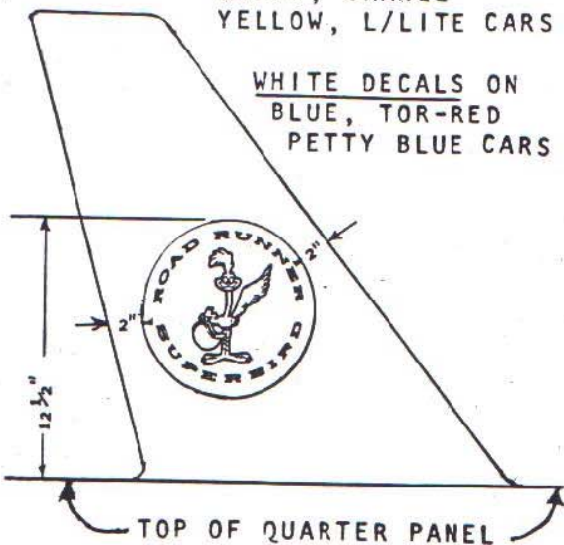

(NOSE - CONE - DECALS)

SEE ARROW BELOW

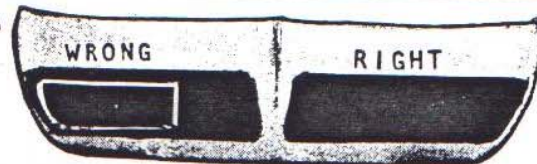

WHEN APPLYING NOSE CONE DECALS READ THE NOTE ABOVE, ABOUT WETTING THE SURFACE WITH WATER WITH 2-3 DROPS OF DETERGENT IN THE WATER.

ALSO VERY IMPORTANT; IF YOU WANT A STOCK APPEARING CAR AFTER A REPAINT. YOU SHOULD NOT SEE ANY BODY COLOR BETWEEN THE TWO BLACK NOSE DECALS. PAINT A 1/2" STRIP ON TOP OF THE NOSE AROUND THE HEAD LIGHT OPENING. THE STOCK DECALS WERE CUT A LITTLE WIDER THAN THE OPENING....

WING UPRIGHT

